

* COBRA CHEAT SHEET *

Cobra Not Working?

a) Replace batteries stored in the back of cobra - extras can be found in the Great Room.

) OFF & ON again!


) See Roshim

hold to speak

POWER BUTTON:

turns on & off when held

- press M 'fill rt. corner says 'CH' (or 'CTC')

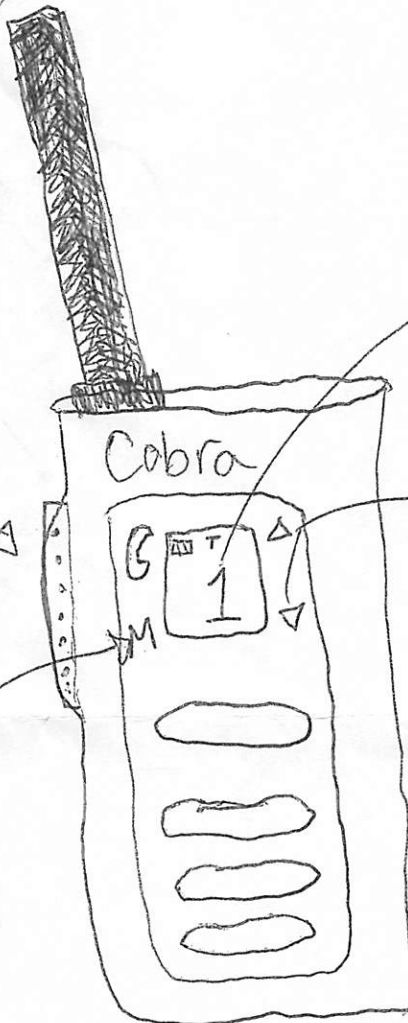

STEPS:

- ① TURN ON COBRA BY HOLDING DOWN 'M' BUTTON ON LEFT BOTTOM
- ② SCROLL TO YOUR ANAF'S CHANNEL (FOUND IN CHANNEL LIST)
- ③ HOLD DOWN SIDE BUTTON TO SPEAK.

channel number

CHANNELS

- ① All Tzoret - Weather Emergen
- ② Alef
- ③ Vav
- ④ Bet
- ⑤ Gimme!
- ⑥ Daled
- ⑦ Kauftana
- ⑧ Baby Bach & Mirbo
- ⑨ Beit Midrash
- ⑩ Chader Ochel & Sheke
- ⑪ Chavalim
- ⑫ Matzilim (lifeguards)
- ⑬ Melechot Yad
- ⑭ Photogs
- ⑮ Plugah
- ⑯ Tech, Can, Mised Music
- ⑰ Sports
- ⑱ Teva
- ⑲ Village
- ⑳ -
- ㉑ -
- ㉒ -

GUIDELINES ^{for} using a Cobra responsibly!!!

- 1) talk into the Cobra from a bit of a distance - not very close to your face.
- 2) say the person's name you are trying to contact TWICE - otherwise it may be difficult to hear.
- 3) Use Cobras for only necessary communications, keep channels mostly clear.
- 4) Turn Cobra sound down when with other staff members

↳ lower but not off!!

members